

INSTALLATION





Recommendations

IMPORTANT: Disconnect the oven from the mains before carrying out any installation work or servicing.

- Installation must be carried out by a qualified technician in accordance with the manufacturer's instructions and in compliance with local regulations.
- Unpack the oven and make sure that the oven has not been damaged during transport and that the oven door closes properly. **If you are not sure contact the dealer or the nearest service centre.**
- After removing the oven from its packaging, leave it on the polystyrene base to prevent it from being damaged.
- When installing the oven it is advisable to wear protective gloves.
- The oven is provided with two side handles  (B) to facilitate installation (fig. 7).

Preparing the housing unit

- Kitchen units in contact with the oven must be heat resistant (90 °C min).
- Cut the kitchen unit and worktop to fit before installing the oven. Carefully remove any shavings or sawdust that could prevent the oven from running properly.
- The dimensions of the housing units in which the oven can be installed are shown in figures 1, 2 and 3. The dimensions of the oven are shown in figure 4.
- To allow for proper ventilation, an opening should be left at the bottom of the housing unit. Pay attention to the dimensions. **The bottom of the oven must not be accessible after installation.**
- During installation make sure that the sides of the oven do not touch the adjacent units.

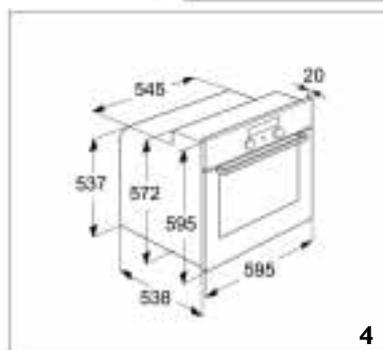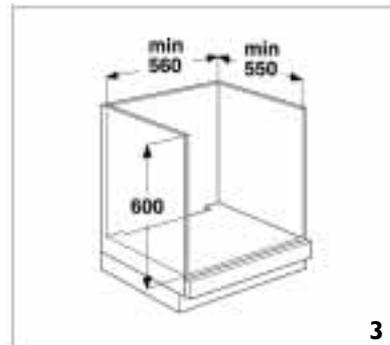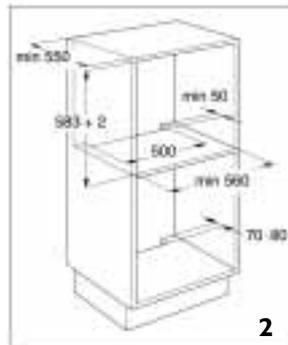
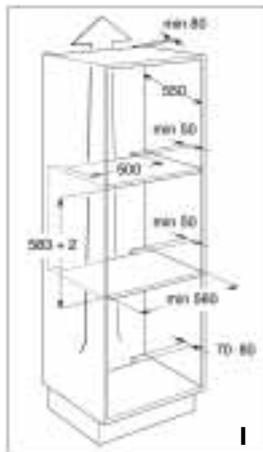


- For ovens installed under the worktop, leave a minimum clearance of 5 mm between the upper edge of the oven and the lower edge of the worktop (fig. 5). **For correct operation of the appliance, this clearance must always be unobstructed.**
- If the kitchen unit is not securely fixed to the wall, it must be anchored with standard brackets (A) (fig. 6).

Electrical connection

Regulations require that the appliance be earthed.

- Connection to the mains must be carried out by a qualified electrician in accordance with the manufacturer's instructions and in compliance with local regulations.
- The installer is responsible for connecting appliances correctly to the mains and for observing the safety regulations.
- The oven power cable must be long enough to connect the built-in oven to the mains.
- Observance of safety directives requires that a multi-pole switch with a minimum contact gap of 3mm be used for the installation.
- Do not use multiple plug adapters or extension leads.
- After the oven has been installed, the electrical components must be inaccessible.

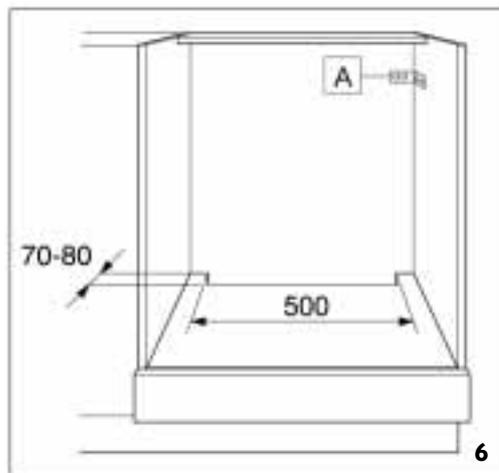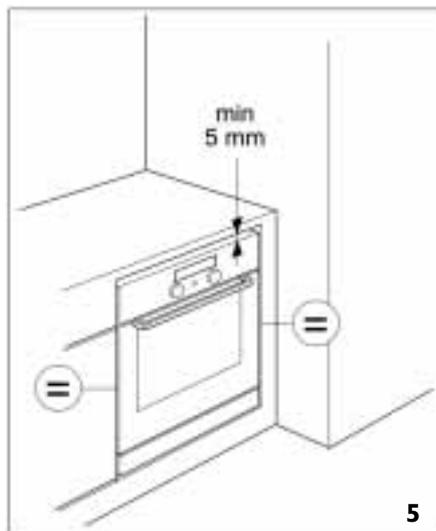

Connecting the oven to the power supply




- Make sure that the voltage indicated on the rating plate is the same as the mains voltage. The rating plate is on the front edge of the oven (visible when the door is open).
- If the power cable is not present proceed as follows:
 1. Remove the two fastening screws of the terminal box cover located on the bottom part of the oven's rear covering.
 2. Remove the cover to gain access to the terminal box and insert the power cable (see table) through the opening located on the bottom of the oven.

Power supply cable table	
N° of leads	Type of cable
1N+ ⊕ ~	H05 RR-F 3 X 1,5 mm ²

3. Connect the cable to the terminal box, tighten the screws as far as they will go and secure it to the cable fastener.
4. Put the cover back on by inserting the two blades in the slots and fasten it with the two screws.

Securing the oven

- Lift up the oven getting hold of it by the handles (B)  on the sides and insert it into the housing unit, being careful not to trap the power supply cable (fig. 8).
- Center the oven in the housing unit before securing it.
- The oven comes with spacers  already fitted to facilitate the anchoring of the oven to the housing unit with the screws provided (as shown in fig. 9).

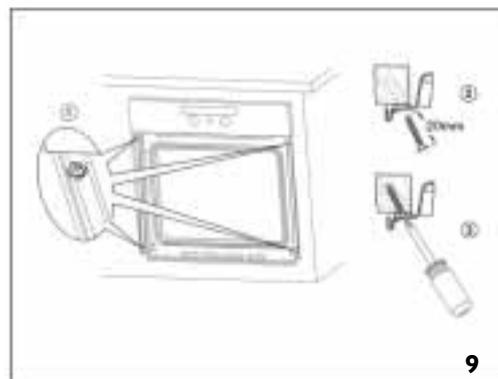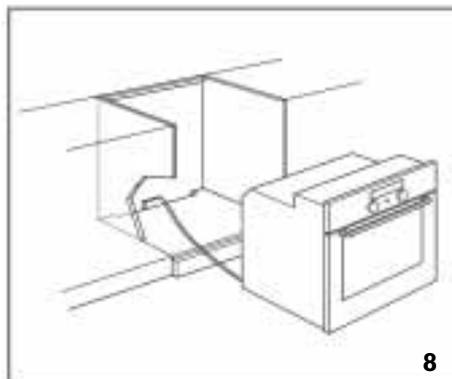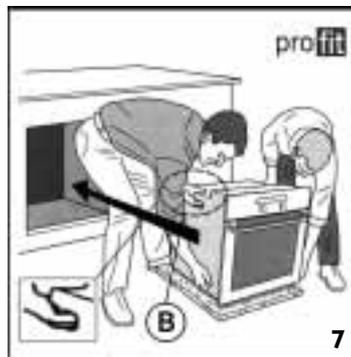

INSTRUCTIONS FOR REMOVING THE DOOR

Attention: When carrying out the following operations it is advisable to wear protective gloves


These instructions should be carefully followed both to prevent injury and in order not to damage the oven and the hinges.

Take special care when removing the glass, because its position has been precisely chosen.

Do not touch the hinges when cleaning and/or removing the door (fig. 9)

How to remove the oven door:

1. Put on protective gloves
2. Open the oven door fully (see fig. 1)
3. Lift the two catches as far as they go (see fig. 2)
4. Remove the door by closing it partially and pulling it upwards (see fig. 3)

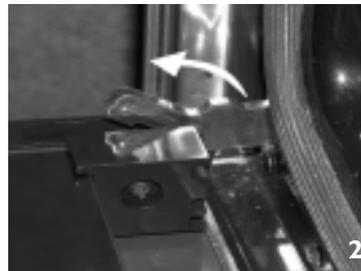

To disassemble the oven door:

1. Place the oven door on a horizontal surface (fig. 4)
2. Unscrew and remove the 2 glass support screws **A** at the side of the hinges. (fig. 4, fig. 5)



3. Lift the bottom of the inside sheet of glass and remove it (fig. 6)



4. Slip out the second and the third sheet of glass, paying particular attention to the position of the word SAFEGLASS (Fig. 7)



5. Refit the sheets of glass in reverse order making sure that:
 - The word SAFEGLASS on the intermediate sheets is facing upwards so as to be correctly legible (fig. 8);
 - if one of the intermediate sheets does not have the word SAFEGLASS it must be inserted in the position closest to the internal glass.




Put the inside glass into position with the word SAFEGLASS facing the top of the door. (fig. 6)
Reposition and screw on the two glass supports A (fig. 4 and fig. 5)

Note: a slight play between the inside glass and the door uprights is to be considered normal as it compensates expansion of the glass caused by heat.

To remount the door:

6. Insert the hinges into their grooves and lower the door fully (fig. 3)
7. Lower the two catches again (fig. 2)
8. Close the oven door fully.

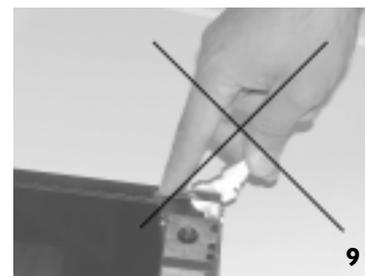

Pay attention to the hinges when cleaning and/or removing the door (fig. 9).

Changing the rear oven lamp bulb:

1. Disconnect the oven from the electrical supply.
2. Let the oven cool before turning the lamp cover left to unscrew it (see fig. 10).
3. Change the bulb (see note).
4. Screw the lamp cover back on.
5. Reconnect the oven to the electrical supply.

Note: use only 25 W/230 V, E-14 type, T500°C bulbs available from After Sales Service.

IMPORTANT: Do not use the oven until the lamp cover has been repositioned.

